






















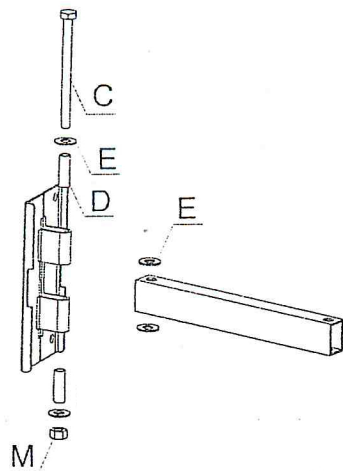


3501G


MUST BE FITTED BY A PROFESSIONAL

1		WALL PLATE	x1	H		M6 Lock nut	x1
2		FRONT PLATE	x1	I		M8x45mm screw	x1
3		SWIVEL CONNECTOR	x1	J		M8 Lock nut	x1
4		Plastic cover	x1	K		Φ8 Nylon washer	x2
5		Aluminum joint arm(1)	x1	L		8X16 coach bolt	x1
6		Aluminum joint arm(2)	x1	M		M8 Nut	x2
A		M5.3x40mm Wall screw	x4	N		Plastic endcap	x2
B		WALL PLUG	x4	O		M4x12mm screw	x4
C		M8x100mm screw	x1	P		M5x12mm screw	x4
D		Φ10x28 Circular tube	x2	<div>  </div>			
E		Φ8x2 Iron washer	x5				
F		M6x48mm screw	x1				
G		Φ6 plastic washer	x2				

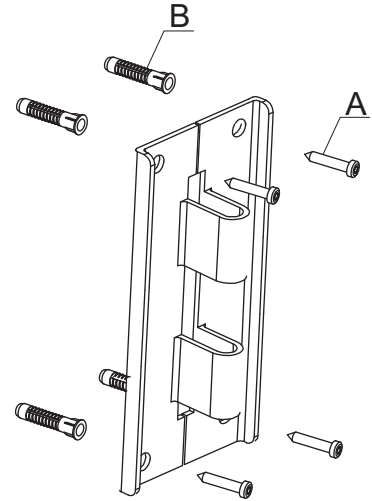
2




5

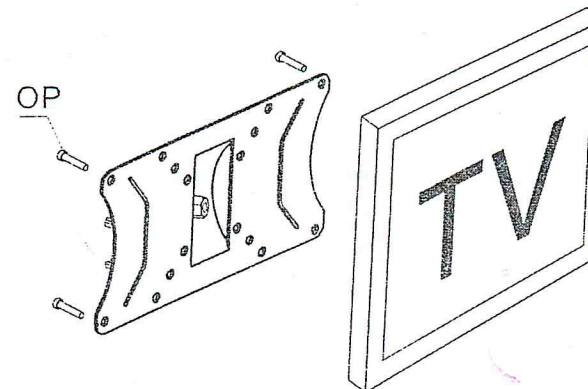


3

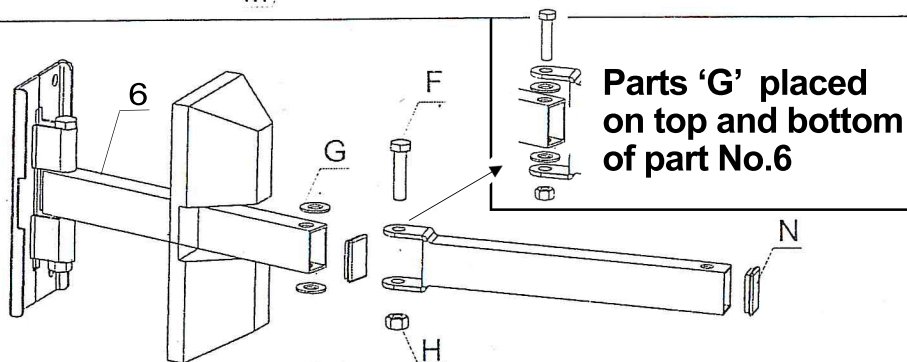


6

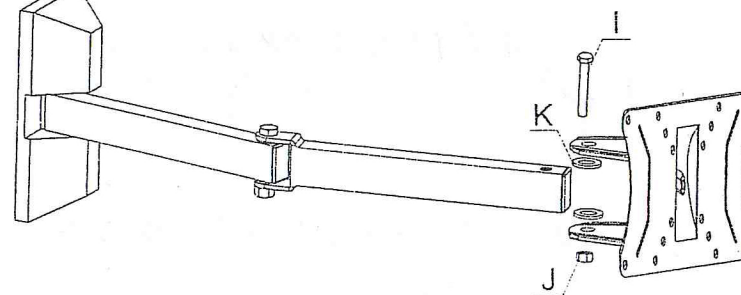

4

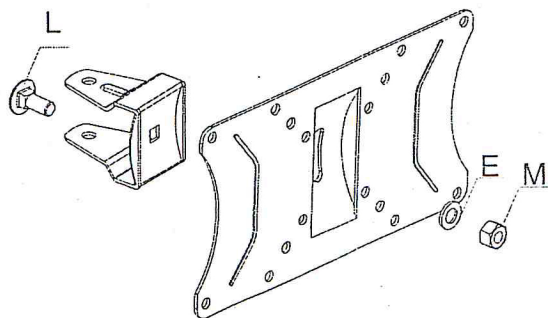

7

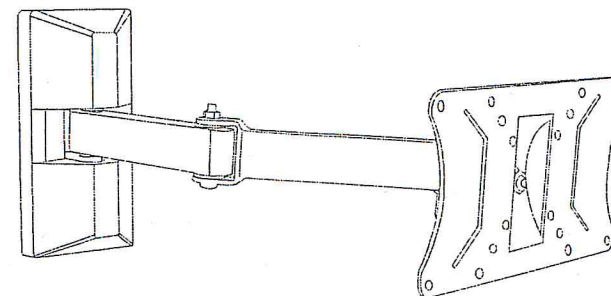

MUST BE FITTED BY A PROFESSIONAL